


Powerful mode setting:

If you want to enter the powerful mode, it is necessary to **turn throttle to linear model(1)** and **not enter powerful mode when power ups(2)**. **Start up powerful mode when turn on the switch(3)**. Now, the start switch and reverse button used at the same time. After **open the electric lock(4)**, it will enter powerful mode once **press the switch(5)**; Press the switch again, the powerful mode will be quite; Long time press the button achieve reverse function. The powerful mode has 0-10 gear range(total 11 gears), the number higher, the power bigger, and the powerful time of duration has 0-5 seconds;

1. Powerful gear: 0- 10 gear(total 11 gears), different gear means different power, which is from weak to strong.
2. The powerful duration: you can set the duration time in 0-5 seconds. 0 seconds means not work. The longer time, the longer duration.

Mark: turn throttle to linear model(1)

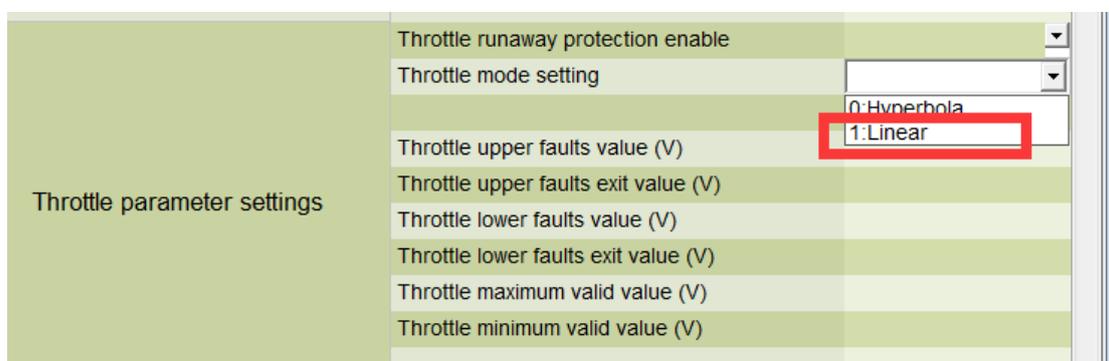

If the problem also not solved, pls. refer to below.

Open the powerful mode, adjust Powerful gear to gear 10, powerful duration to 5 seconds. Install a reverse switch(not self-locking type), start to driving the vehicle and battery full charged(make sure the vehicle is on quiescent state before start), press reverse button, then turn twist throttle(please don't full turned the throttle). Remember **turn throttle to linear model before driving.**

中文

十四、**暴起模式设置**：要进入暴起模式，转把必须改为线性模式，且上电时默认不进入暴起模式。需按下开关，暴起模式才能启动。目前暴起模式启动开关和倒车按键同时使用。打开电门锁后。点按一下开关即进入暴起模式，再按一下退出，长按即倒车，暴起模式分为 0-10 个档位，数字越高，启动越暴力，暴起持续时间分为 0-5 秒；

- 1、 **暴起档位**：我们把暴起力度分为11个档位，不同的档位代表不同的力度，0-10 依次为从弱到强；
- 2、 **暴起持续时间**：持续时间我们分为 0-5 秒。0 秒时不执行暴力启动。1-5 秒为不同长度的暴起持续；

如果以上还不能解决这个问题

软件暴起功能打开，调到 5 秒，10 档。让他车上装个不带自锁的倒车开关，满电的时候起步时（车子静止状态启动， 电池电压低的话，在软欠压或者电压偏低的情况下，是没有作用的），按一下倒车，然后拧转把，不要满把拧。转把要改成线性，不能用柔性