



How to adjust Twist Grip (Ref: 010)



Tighten the adjuster.
Free travel distance 2-4mm



Loosen the adjuster.
Free travel distance 2-4mm