



5" TFT Dashboard Instruction

Caution: Key operation is invalid when speed is NOT zero

1. ODO reset

- Power on the dashboard, press and hold the key ② after the self-inspection running for 1 second.
- The interface will be back to normal when reset done.

Caution: ODO can be reset 3 times within 200 km. Reset is unworkable once odometer over 200 km

2. TRIP reset

Press and hold the key ② for 30 seconds when dashboard is power on.

3. Display of ODO / TRIP

ODO displayed on the left, TRIP displayed on the right.

4. Switch of Metric Units / Imperial Units

Press and hold the key ① for 30 seconds when dashboard is power on.