

“HOW TO”

Remove seat & tank SE / SEL


Remove the seat

- Picture 1: (1) Remove the left & right bolt of the saddle strap
(2 x ISO 4762 Bolt M6x16) Use tool Allen key #5
(2) Remove both left and right rear bolts of the saddle
(2 x “Special bolt” Use tool Allen key #5)


Picture 2: Remove the saddle by pushing it backwards and then up.

NOTE: If a motorcycle has a luggage rack, there is no need to remove it to be able to remove the saddle.

Picture 1

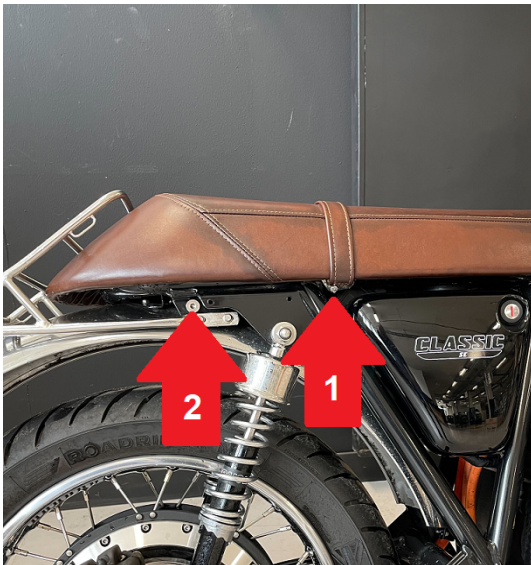

Picture 2

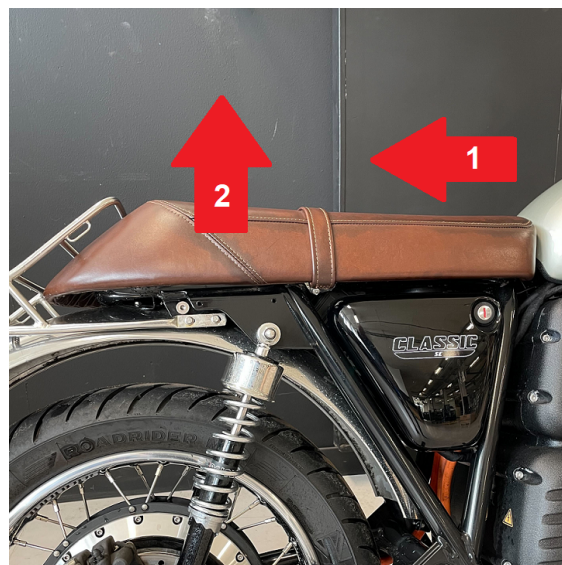

Remove the tank


The tank is attached to the motorcycle with in total 3 bolts,
2 bolts in the front and 1 bolt in the rear
(DIN 6921 Bolt M6x20 Torque 5Nm)

Picture 1: Remove the rear bolt

Picture 2: Remove the right and left front tank bolts
(DIN 6921 Bolt M6x20 Torque 5Nm)

Remove the tank by gently pulling it upwards.
It will require some flirting movement to be removed.

Picture 1

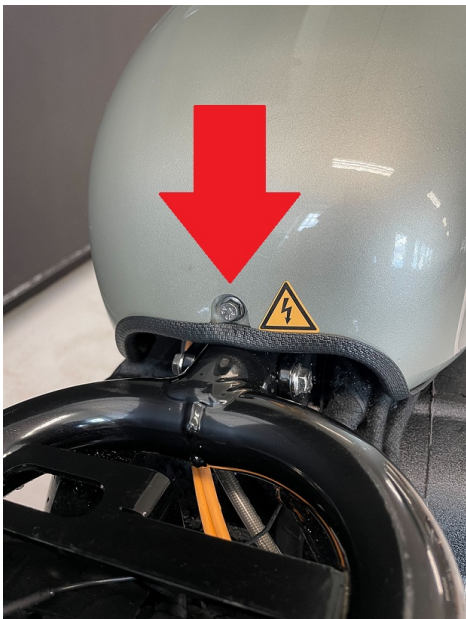

Picture 2



Contact Information

Please contact us if you have any questions or need support

Office is open Monday-Friday 08:00-17:00

Email: support@rgnt-motorcycles.com

Place of Factory & Headquarters

**RGNT Motorcycle AB
Älvsåkersvägen 22
434 37 Kungsbacka
SWEDEN**

